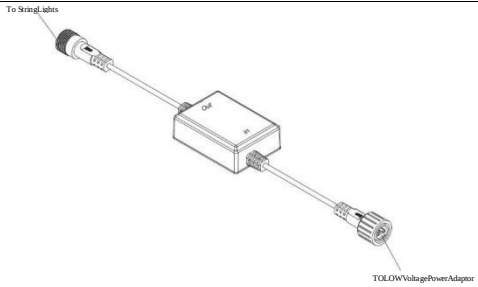



Festive

FESTIVE MAGIC WAND & CONTROLLER – P058262

Contents:

	
IP20 Magic Star wand controller (2 x AAA required, not included)	IP20 Wireless RF receiver (controller box)

Assembly instructions.

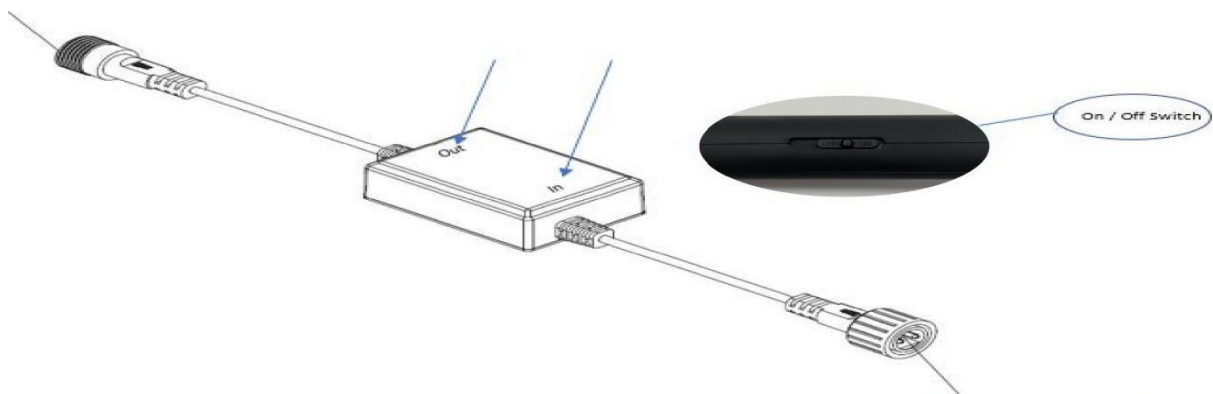

Installation & pairing:

Plug your suitable Low voltage power adaptor (5-34V, Max 1.2A) to the end marked with In.

Plug your suitable Low voltage LED item within the range of (5V-34V, Max 1.2A 2 pin screw in connection) to the end marked with Out.

Plug the transformer into the wall socket (do not use extension leads) and turn the switch on at the socket.

Next push the switch to ON, on your magic wand.

Festive Productions Limited
Otters Brook

Ty Coch Way
Cwmbran, NP44 7EZ

AB Alrik Hedlund-412 21,
Gothenburg, Sweden

01633627300

www.festive.co.uk

MADE IN CHINA



support@festive.co.uk



Support-FPL@hedlundgruppen.com

Festive

Please note that it can take between 1 – 2 minutes to pair, once paired the light set will blink 3 times, then you can switch your Lit item ON & OFF by a wave of the magic wand.

How to operate:

Wave the magic wand, the light set comes on.

Wave the magic wand again, the light set goes out.

Please note that the wand will only turn the set ON & OFF.

If you want to change the functions, that's if your set is multifunction, you will have to change either by pressing the button on the transformer or by pressing the button on an inline multifunction controller.

Please note that if the item has a timer function, that if the set has been turned OFF by the wand, that when the OFF cycle of the timer function runs out, the set could reboot and turn the set back on.

Please note that the magic wand needs to have a clear line of sight to the inline RF receiver, and it may not work if walls or partitions obscure the wands line of sight to the receiver.

PLEASE NOTE: Although the wand and receiver is too be indoors at all times, this item can be used on light sets that are outdoors, as long as the transformer and receiver is indoors.

How to change the batteries on the magic wand:

At the base of the wand on the side, you will see a battery compartment cover secured shut by a screw.

Unscrew the screw from the cover & remove the battery compartment cover.

Next insert 2 x AAA 1.5V DC batteries following the correct polarity markings.

Place the cover back on and secure tight by screwing the screw back in place.

Warnings:

Transformer and RF receiver must remain indoors at all times.

This set is for indoor use only.

Keep the batteries away from children, if swallowed seek urgent medical attention immediately.

An adult must carry out battery replacement and installation.

Festive Productions Limited

Offers Brook

Ty Coch Way
Cwmbran, NP44 7EZ

AB Alrik Hedlund-412 21,
Gothenburg, Sweden

01633627300

www.festive.co.uk

MADE IN CHINA



support@festive.co.uk



Support-FPL@hedlundgruppen.com

Festive[★]

Check that you have the correct type and quantity of batteries.
Do not short circuit the battery terminals.
Do not modify the battery compartment in any way.
Do not mix used and new batteries.
Do not mix alkaline, standard, lithium or rechargeable batteries.
Remove batteries from product when not in use for long periods of time.
Store unused batteries in their original packaging.
Do not recharge non-rechargeable batteries.
Keep away from heat or a direct flame.
Install carefully to prevent any damage to the batteries.
Remove exhausted batteries from this product.

Care and use:

Clean with a dry cloth.
Always remove batteries when not in use.
Always store in dry conditions.

Troubleshooting:

Q: why does the wand controller no longer work or has lost the sound function?
A: When the battery is low in power, it may not have enough power to send the ON/OFF signal to the receiver or play the sound effect. We suggest replacing the batteries with a new set.

Q: I have tried brand new batteries, and it doesn't seem to turn the set ON or OFF?
A: The wand controller is not paired or has disconnected with the wireless RF receiver, please turn off the main power supply to the low voltage adaptor, remove the batteries out of the wand, wait for 5 minutes, put the batteries back in, then repeat the pairing process.

Electrical ratings:

This ITEM operates on 3V DC 0.06W
LED non-replaceable bulb rating 3V 0.02A 0.06W Max.



This Symbol indicates that this product is covered by legislation for waste electrical electronic products. When the product has reached the end of its life, please do not dispose of it with general household waste. Consider the environment and take it to a recognised recycling facility.



LIGHTSET

Festive Productions Limited
Otters Brook

Ty Coch Way
Cwmbran, NP44 7EZ

AB Alrik Hedlund-412 21,
Gothenburg, Sweden

01633627300

www.festive.co.uk

MADE IN CHINA



support@festive.co.uk



Support-FPL@hedlundgruppen.com