

Festive

INSTRUCTION USAGE For Battery Operated P057725, P057726, P057727, P057728

BOX CONTENT:

1 x Tree top star
1 x battery compartment

ASSEMBLY INSTRUCTION

No assembly required.

OPERATING INSTRUCTION

On the battery compartment there is a 3 WAY switch.

1. Slide the switch to ON 1, the lights come on & stay on continuously.
2. Slide the switch to OFF, the lights go off.
3. Timer function, the lights will stay on for 6 hours and then switch itself off and remain on off mode for next 18 hours.

The lights will always twinkle, this cannot be stopped or changed.

BATTERY CHANGING:

Remove the battery cover by holding the compartment in one hand, using your thumb, place on the arrows at the bottom of the compartment cover and push upwards until the cover comes off.

Insert the correct battery type and QTY as per item following the correct polarity.

Place the battery compartment cover back in place.

WARNING

This set is for indoor use only.

For decorative purposes only.

Keep out of the reach of children & pets, it may contain small parts!

An adult must carry out battery replacement and installation.

Check that you have the correct type and quantity of batteries.

Do not short circuit the battery terminals.

Do not modify the battery compartment in any way.

Do not mix used and new batteries.

Do not mix alkaline, standard, lithium or rechargeable batteries.

Festive Productions Limited

Otters Brook

Ty Coch Way
Cwmbran, NP44 7EZ

AB Alik Hedlund-412 21,
Gothenburg, Sweden

01633627300

www.festive.co.uk

MADE IN CHINA



support@festive.co.uk



Support-FPL@hedlundgruppen.com

Festive[★]

Remove batteries from product when not in use for long periods of time.

Store unused batteries in their original packaging.

Do not recharge non-rechargeable batteries.

Keep away from heat or a direct flame.

Install carefully to prevent any damage to the batteries.

Remove exhausted batteries from this product.

CARE INSTRUCTION

Clean with a dry cloth.

Always remove batteries when not in use.

Always store in dry conditions.

ELECTRICAL RATING

Each item operates on - 4.5V DC

LED non-replaceable bulb rating 3V 0.01A 0.06W

BATTERY REQUIRED.

Each item requires 3x AA 1.5V



This Symbol indicates that this product is covered by legislation for waste electrical electronic products. When the product has reached the end of its life, please do not dispose of it with general household waste. Consider the environment and take it to a recognised recycling facility.



Festive Productions Limited
Otters Brook

Ty Coch Way
Cwmbran, NP44 7EZ

AB Alik Hedlund-412 21,
Gothenburg, Sweden

01633627300

www.festive.co.uk

MADE IN CHINA



support@festive.co.uk



Support-FPL@hedlundgruppen.com