

Where quality matters



TYPE
CANDY CANE
QSF1001

INSTRUCTION USAGE FOR P048971- 70cm LIT Acrylic Candy cane leg gonk, P048973- 70cm LIT acrylic candy cane leg reindeer, P048972- LIT acrylic candy cane leg snowman

BOX CONTENTS

1x Acrylic body
1x pair of legs
1x pair of shoes
1x transformer

ASSEMBLY INSTRUCTIONS, please follow same instructions for P048971 &P048973.

Please follow the below illustrations.

1.Place the string lights into snowman legs. 2.add shoes to the bottom of the legs. 3.Connect the top of legs with snowman body. 4. Snowman should be well balanced now to be placed standing up.



OPERATING INSTRUCTIONS

Place the lit acrylic character in your desired location.

Always plug transformer into wall socket (indoors)

Switch lights on at the socket.

The acrylic character will light up.

To switch off, switch plug off at the socket.

WARNINGS

Please read all instructions and warnings before use.

Keep away from children & pets.

Do not operate this item whilst still in the packaging.

The LED lamps are not replaceable.

Do not try to connect this set electrically to another set.

If there is any damage or breakage to the electric wire, please dispose of safely.

This light set is suitable for indoor and outdoor use.

Ensure that cables are fully unwound and sited where they will not become damaged or present a tripping hazard.

Do not secure the wiring of this product with staples or nails.

Do not close doors or windows on the product, as this may damage the wiring insulation.

Do not submerge this product in water (e.g. puddles, guttering or ponds)

Remove batteries when not in use.

Do not dispose of in fire. Keep away from all sources of heat.

Do not short circuit the supply terminals.

Do not overload wall sockets. Use different sockets around the house to plug in multiple lights to balance the load.

Do not damage the insulation of cable or LED holder.

Do not lay the cable under carpet or where it can be damaged.

Do not completely cover the LED with decorations & other flammable materials. Ensure adequate airflow around each LED.

ELECTRICAL RATINGS

Input 230-240V ~ 50HZ

THIS SET OPERATES ON 3.5V DC 1W

TRANSFORMER RATING- 3.5V DC 1.5W

LED BULB RATING – 3v 0.02A.0.06w

CARE INSTRUCTIONS

Wipe clean with a dry cloth.

Always store in dry conditions.

This item is for indoor and outdoor use.

WEEE WASTE

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.



Festive Productions Limited

Otters Brook,

Ty Coch Way

Cwmbran, NP44 7EZ.

AB Alrik Hedlund – 412 21,

Gothenburg, Sweden.

www.festive.co.uk



Festive Technical Support
 support@festive.co.uk

MADE IN CHINA

QSF1001

Please retain these instructions for future reference.

