

Where quality matters



TYPE WHITE HOUSE

QSF1001

P051458- 90cm white house and berry fibre optic tree
P051459- 120cm white house and berry fibre optic tree
P051460- 150cm white house and berry fibre optic tree
P051461- 180cm white house and berry fibre optic tree

These instructions are for your safety. Please read them thoroughly before use and retain for future reference. Please see the additional information on cable label.

Before You Start - No tools required for assembly.

- Make sure that you have plenty of space and a clean dry place for assembly.
- Always try to assemble the product as close as possible to the intended location.
- Remove all plastic bags and dispose of safely.

Positioning Instructions

- 1) This Fibre Optic Tree is for **INDOOR USE ONLY**.
- 2) Do not position or place near heaters or any other direct sources of heat.
- 3) Always position cables and extension leads so that they will not be a hazard to the elderly, pets and children.
- 4) **DO NOT** position this product where it may be covered by other items e.g. curtains, nets or bedding or tree skirts.
- 5) The mains transformer **MUST** be located **INDOORS**.
- 6) This product is suitable for positioning on surfaces which have normal flammability e.g. wood, plasterboard, and masonry. However, this does not include highly flammable surfaces (e.g. polystyrene, textiles).
- 7) Place tree on a level surface. Do not place on long pile carpet, as this may affect stability and interfere with the ventilation of the base. **Do not cover the ventilation holes in the base.**
- 8) This product is not designed for permanent or long-term use.

Assembly



fig.1



fig.2



fig.3

- 1) Prepare the base. fig.1 ready.
- 2) Insert tree into the hole of the base as fig.2.
- 3) Connect the output cable from the foot of the tree to the transformer, using the power cable provided as fig.3.
- 4) Shape tree by arranging branches to create a full and natural look.
- 5) Connect the transformer into mains supply & switch on at the wall socket.
- 6) The tree will light up; the colour will change and shimmer.

The LEDs on this tree are non-replaceable under normal conditions. If a bulb fails, the remaining bulbs should remain alight providing the defective bulb is undamaged.

Warning

- This tree is intended for **INDOOR USE ONLY**.
- **IMPORTANT – DO NOT LOOK DIRECTLY INTO THE LED**
- This product contains **NON- REPLACEABLE LED**. Do not attempt to replace them.
- Do not connect this product electrically to another product.
- Never allow any part of the set to meet a source of heat or flame.
- Do not operate this product in its packaging.
- Keep the product well ventilated. **DO NOT** cover the product with cloth, a tree skirt, paper, or any other material.
- Take care not to damage the cable or fittings.

- If part of the light set or cable is damaged the product **MUST** be destroyed.
- Always position your tree, cable and extension leads so that they will not be a hazard to the elderly, pets and children.
- Do not position a Christmas tree or decoration near candles or any other sources of heat or naked flame.
- Always switch off decorative lights overnight or if unattended. Do not overload power socket or extension cables.
- This product is for decoration use only. Not to be used by children as a toy. Keep out of reach of small children.
- Please refer to the packaging or product rating label for product class, specifications, and rating.
- **Caution** – Artificial trees have parts which may pose a choking hazard if detached from the branches.
- Locate your tree on a level surface that will not be damaged by the tree or decorations that could detach.
- **DO NOT** pierce the cable when securing in place, bend or stand on the light chain, as this will damage the bulbs or wiring. Do not cover ventilation holes.
- Only operate this product with the transformer supplied.
- Do not connect this item directly to the mains or to anything other than the transformer supplied.
- Please ensure the transformer is plugged into the mains supply indoors and not outdoors or in damp conditions as serious injury could result.

Packing the tree away after use

When you have finished using, please repack as follows to avoid damage and to ensure that your tree can be used again.

- Dismantle the tree into sections, base, tree and power supply.
- Place all components into the original box using the protective material supplied.
- We recommend that you tether or cello tape the box to avoid any lost items.
- Before you place the tree into storage, **check that you have not forgotten any components.**
- Ensure the storage area is dry; avoid any damp, wet and humid areas.

ELECTRICAL RATINGS

P051458

This set operates on – 12V DC 3.2W

Transformer rating – 12V DC 3.6VA

P051461

This set operated on- 12V DC 3.5W

Transformer rating- 12V DC 3.6W

P051459

This set operates on- 12V DC 3.3W

Transformer rating – 12V DC 3.6W

P051460

This set operates on 12V DC 3.4W

Transformer rating -12V DC 3.6W



This Symbol indicates that this product is covered by legislation for waste electrical electronic products. When the product has reached the end of its life, please do not dispose of it with general household waste. Consider the environment and take it to a recognised recycling facility.



Festive Productions Limited

Otters Brook,

Ty Coch Way

Cwmbran, NP44 7EZ.

AB Arik Hedlund – 412 21,

Gothenburg, Sweden.

www.festive.co.uk



Festive Technical Support
 support@festive.co.uk

MADE IN CHINA