

Festive

INSTRUCTION USAGE For Battery Operated WATER SPINERS P059699 P059700 P059701 P059702 P059705 P059728 P059729 P059730 P059732, P059733, P059734, P059735 Various design

BOX CONTENT:

1 x water spinner

ASSEMBLY INSTRUCTION

No assembly required.

OPERATING INSTRUCTION

Once the batteries are installed use the switch to turn ON and turn OFF the water spinner.

Items P059699 & P059700 are supplied with a timer function. Water spinner will be stay lit for 6 hours, then automatically switch itself of and remain on off mode for next 18 hours.

Item P059730 has a 3-way switch:

ON1 -multicoloured lights,

OFF- it will turn the water spinner off

ON2- colour of the lights will be warm white.

BATTERY CHANGING

Remove the battery cover from the battery compartment.

Following the polarity markings inside the compartment, insert the 3 x AA batteries.

Replace the battery cover.

ELECTRICAL RATING

Each water spinner has a dual power.

Batteries:

Each spinner operates on 4.5V DC, 3 x AA 1.5V DC Batteries, not supplied.

Transformer:

Each water spinner can be also operated with a Festive transformer model no. P059731.

This requires a separate purchase.

Transformer rating 5V DC 3W

Festive Productions Limited

Otters Brook

Ty Coch Way

Cwmbran, NP44 7EZ

AB Alrik Hedlund-412 21,

Gothenburg, Sweden

01633627300

www.festive.co.uk

MADE IN CHINA



support@festive.co.uk



Support-FPL@hedlundgruppen.com

Festive[★]

WARNING

This item is for decorative use only.
Please read all instructions and warnings before use.
Keep away from children & pets.
Do not operate this item whilst still in the packaging.
The LED lamps are not replaceable.
Remove batteries when not in use.
Batteries should only be installed by an adult.
Always remove exhausted or dead batteries from the product.
Do not dispose of in fire. Keep away from all sources of heat.
Remove batteries from the product before storage.
Do not short circuit the supply terminals.
Batteries are to be inserted with the correct polarity.
Never mix old and new batteries.
Batteries may explode or leak if misused.
Do not charge non-rechargeable batteries.
If batteries are swallowed seek urgent medical advice.
Do not recharge non-rechargeable batteries.
Keep away from heat or a direct flame.
Install carefully to prevent any damage to the batteries.
Remove exhausted batteries from this product.

CARE INSTRUCTION

Clean with a dry cloth.
Always remove batteries when not in use.
Always store in dry conditions.



This Symbol indicates that this product is covered by legislation for waste electrical electronic products. When the product has reached the end of its life, please do not dispose of it with general household waste. Consider the environment and take it to a recognised recycling facility.



Festive Productions Limited
Otters Brook

Ty Coch Way
Cwmbran, NP44 7EZ

AB Alrik Hedlund-412 21,
Gothenburg, Sweden

01633627300
www.festive.co.uk

MADE IN CHINA



support@festive.co.uk



Support-FPL@hedlundgruppen.com