

Festive

INSTRUCTION USAGE For Battery Operated WATER SPINERS P060938

BOX CONTENT

1 x water spinner

ASSEMBLY INSTRUCTION

No assembly required.

OPERATING INSTRUCTION

Once the batteries have been installed:

ON- push the button to ON position to turn the water spinner on

OFF- push the button to OFF position the water spinner will be switched OFF.

BATTERY CHANGING

Remove the battery cover from the battery compartment.

Following the polarity markings inside the compartment, insert the 3 x AA batteries.

Replace the battery cover.

ELECTRICAL RATING

Each water spinner has a dual power.

Batteries

Each spinner operates on 4.5V DC, 3 x AA 1.5V DC Batteries, not supplied.

Transformer

Each water spinner can be also operated with a Festive transformer model no. P059731.

This requires a separate purchase.

Transformer rating 5V DC 3W

CARE INSTRUCTION

Clean with a dry cloth.

Always remove batteries when not in use.

Always store in dry conditions.

Festive Productions Limited

Offers Brook

Ty Coch Way
Cwmbran, NP44 7EZ

AB Alrik Hedlund-412 21,
Gothenburg, Sweden

01633627300

www.festive.co.uk

MADE IN CHINA



support@festive.co.uk



Support-FPL@hedlundgruppen.com

Festive[★]

WARNING

This item is for decorative use only.

Always place on a flat surface and away from pets and small children.

When replacing batteries, place on a soft towel and handle with care.

Please ensure this item is placed away from accidentally impacts or risk of being knocked over.

Please read all instructions and warnings before use.

Keep away from children & pets.

Do not operate this item whilst still in the packaging.

The LED lamps are not replaceable.

Remove batteries when not in use.

Batteries should only be installed by an adult.

Always remove exhausted or dead batteries from the product.

Do not dispose of in fire. Keep away from all sources of heat.

Remove batteries from the product before storage.

Do not short circuit the supply terminals.

Batteries are to be inserted with the correct polarity.

Never mix old and new batteries.

Batteries may explode or leak if misused.

Do not charge non-rechargeable batteries.

If batteries are swallowed seek urgent medical advice.

Do not recharge non-rechargeable batteries.

Keep away from heat or a direct flame.

Install carefully to prevent any damage to the batteries.

Remove exhausted batteries from this product.



This Symbol indicates that this product is covered by legislation for waste electrical electronic products. When the product has reached the end of its life, please do not dispose of it with general household waste. Consider the environment and take it to a recognised recycling facility.



Festive Productions Limited
Otters Brook

Ty Coch Way
Cwmbran, NP44 7EZ

AB Arik Hedlund-412 21,
Gothenburg, Sweden

01633627300
www.festive.co.uk

MADE IN CHINA



support@festive.co.uk



Support-FPL@hedlundgruppen.com